


Motion Sensor Wall Sconce

Operating Instructions

Battery Installation & Replacement

- 1) Remove the battery cover by depressing the tab on the back of the sconce as shown in the diagram.
- 2) Install 3 AA batteries making certain to match the polarity as shown in the diagram in the battery compartment.
- 3) Do not mix battery types. Use only fresh batteries. Alkaline are recommended.
- 4) Check light operation to confirm that batteries are correctly installed.
- 5) Replace the battery cover.

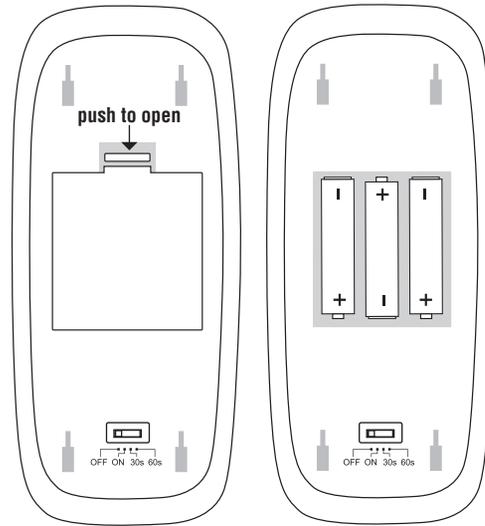

Versatile...installs anywhere

The Motion Sensor Wall Sconce is battery-operated with an versatile mounting system that installs virtually anywhere in minutes. It is perfect for lighting clothes closets, cabinets, utility rooms, sheds, garages, and much, much more.

Automatic, Manual or Portable

The Motion Sensor Wall Sconce can be operated manually or automatically using the built-in sensor. The motion sensor will automatically turn on the light at night or in dark spaces whenever a moving heat source is detected. The light comes on for 30 or 60 seconds (user selectable) and remains on as long as motion continues to be detected. The Motion Sensor Wall Sconce also has a photo sensor which prevents the light from being activated during the day or when the area is already illuminated by another light source. If you prefer, you can also use it in the manual mode...ideal during emergencies or when you are performing an intricate task. You can even remove the light from its mounting bracket and use it as a portable light or a hands-free task light.

Selecting a Location

The motion sensor's maximum detection distance is 18 feet and has a detection angle of 100°. The light should not be installed near heaters, heat vents, or other heat sources. Reflective surfaces (light colored walls, mirrors, etc.) may trigger the motion sensor resulting in false activation. Be aware that pets can activate the motion sensor and that in some locations external factors such as automobiles and pedestrians may also need to be considered.

Mounting Instructions

Determine the location of the light, as noted above, then remove the battery cover/mounting plate from the light and follow the steps below to mount it.

Double-sided Tape Mounting: Be certain that the intended mounting surface is clean, dry, and suitable for attachment. Take care to select a location that will not be damaged by the adhesive tape. Remove the protective film and apply the tape to the mounting bracket. Peel off the protective film and press the mounting bracket firmly to the intended surface.

Screw Mounting – Wood Surfaces: Drill a 1/16" pilot hole, insert the screw and gently tighten it until the mounting plate is secure. Do not over tighten.

Screw Mounting – Drywall: Drill a 3/16" pilot hole, insert the drywall anchor and press firmly until it is fully seated into the wall. Insert the screw and gently tighten it until the mounting plate is secure. Do not over tighten.

Mode switch

Manual Operation

- a. Slide the switch on the back of the light to the ON position.
- b. Slide the switch on the back of the light to the OFF position.

Automatic (Sensor) Operation

- a. Slide the switch to 30S. Light will turn on automatically when motion is detected and will remain on while if activity continues. The light will automatically shut off in 30 seconds if no further motion is detected.
- b. Slide the switch to 60S. Operation is the same as described above, however the delay is 60 seconds.

Dimming the light

To dim or brighten the light, slide the dimmer switch, located on the bottom front of the sconce, to the desired level.

ATTENTION

To avoid damage to the electrical components, please observe the following precautions:

Do not aim the Motion Sensor Wall Sconce directly towards the sun.

Do not shake or drop the light

Do not expose the unit to static electricity

Please note that circuit requires 90 – 180 seconds to stabilize after the batteries are inserted.

Do not mix battery types (carbon, alkaline, lithium, or NiMH)

When LEDs become weak, batteries must be replaced

Limited 1 Year Warranty

This product is guaranteed against defect and workmanship for a period of 1 year from the date of purchase. If the product fails during normal use, please return it to the place of purchase together with a copy of the sales receipt. Alternatively, you may contact us at info@fulcrumproducts.com and we will arrange to have the product replaced or repaired at our discretion.

WARNING: Modifications to this or other products by anyone other than an authorized repair agent may void that product's warranty.

Specifications – Model # 30027-308

Operating Mode: PIR Motion Sensor

Detection Distance: 18'

LED Type: 4 SMD

Lumens: 55 lumens (per light)

Color Temp: 5500 Kelvin (cool white)

Battery Type: AA (x3), alkaline recommended

Battery Life (constant run time): approx. 25 hours (full brightness)

Battery Standby Life: approx. 20 months*

**actual battery life will vary according to frequency of use.*

Included Items

Double-sided adhesive tape • Screws & drywall anchors
Operating Instructions

CAUTION

Do not mix battery types

Use only fresh batteries for reliable operation

Do not look directly into the light